


ProofVision Outdoor Lifestyle TV

User Manual

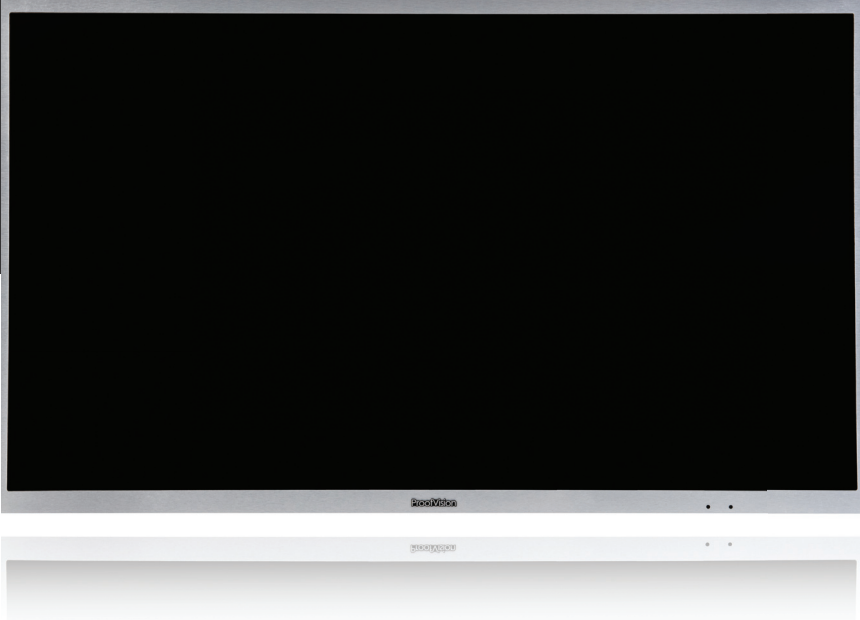

Please read these instructions thoroughly before attempting to operate or adjust this television.

1. Safety	2
2. About	3
3. Installation	4
4. Remote	8
5. Menus	9
6. Warranty & troubleshooting	12

Installation

Installation must be carried out by a qualified installer i.e. AV technician.

- The installation of the cables must be carried out in a dry place and sealed tightly with the 8 screws provided. Failure to do this will void your warranty.
- The VESA screws provided should be the only screws used with the ProofVision Outdoor TV, for spares please contact ProofVision directly.
- Please make sure the wall chosen to install on is of a substantial nature and that rust proof fixtures are used.
- We strongly recommend the ProofVision screen is not installed in DIRECT SUNLIGHT for long periods of times. The units top operating temperature is 60 Celsius and the unit can reach this temperature if exposed to direct sunlight over a long period of time.

Caution

Never tamper with any of the components, or any other adjustment controls not mentioned in this manual.

The LED panel used in this product is made of glass. Therefore, please take care it can break when the product is dropped or applied with impact. When you are cleaning the panel, make sure the power cord is pulled out from the plug receptacle. Then wipe the receiver with a dried soft cloth. All technical work on the TV should only be performed by an electrician, due to the high voltage.

TECHNICAL SPECIFICATION

Display size	43"	YPbPr	1Group
Max resolution	1920x1080	HDMI	2PCS
Aspect ratio	16:9	RF	1PC
Contrast ratio	5000:1	RS232	1PC (optional)
Brightness	700 cd/m2	IR Out	1PC (optional)
Viewing angle	178 degree /178 degree (H/V)	PC Audio	1PC
Frame material	Brushed aluminum	USB	1PC
Colour	Silver	Audio out/earphone	1PC
Max power consumption	≤120W	Built-in amplifier	Yes (15W+15W output)
Power input range	AC 90 – 240V	Waterproof remote control	1PC
TV systems	PAL B/G/SECAM/NTSC (optional)	VESA standard	200x200mm
Signal input	Analog DVB-T/T2/S/S2/C	Screw	4PCS
Audio system	D/K,B/G,I,M	Cable box	Yes
Multilanguage OSD	Yes	Operating temperature	-20 to 60 degrees
VGA	1PC	Dimensions	970x580x67mm
AV	1Group		

About




TV




Remote



Power cable

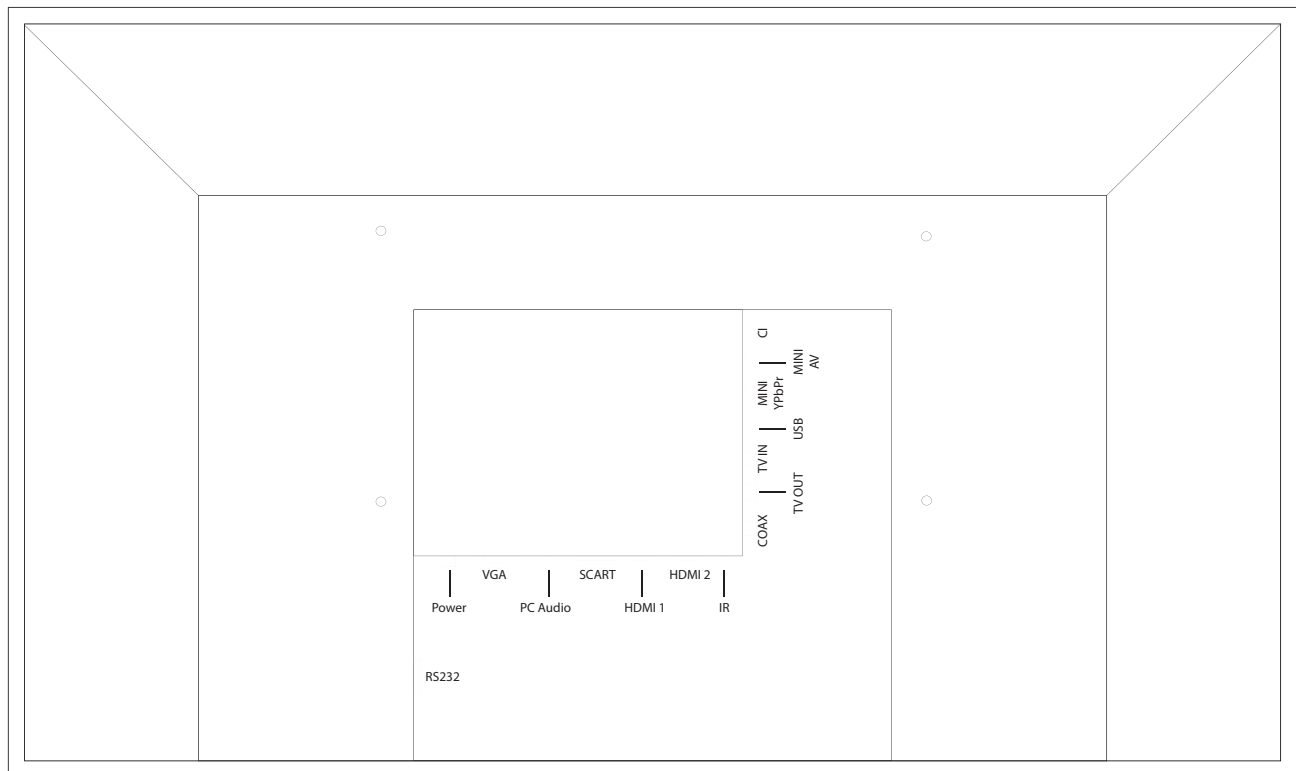


Installation

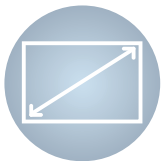


Screen size
43"



Weight
25kg

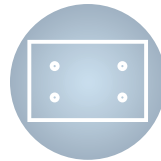

VESA
200 x 200mm

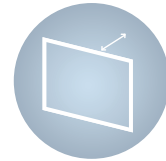

Distance to
wall 60mm

Warning - Please read before installation

Please thoroughly read instructions before attempting installation


The bracket supplied is only suitable for the ProofVision Residential 32" – 55" Outdoor TVs

We advise that 2 people install the screen due to the heavy load of the screens

Please be sure the mounting surface is strong enough to hold the weight of the screen


Step 1 – Mounting Bracket to Wall

Attach back plate to wall using supplied screws

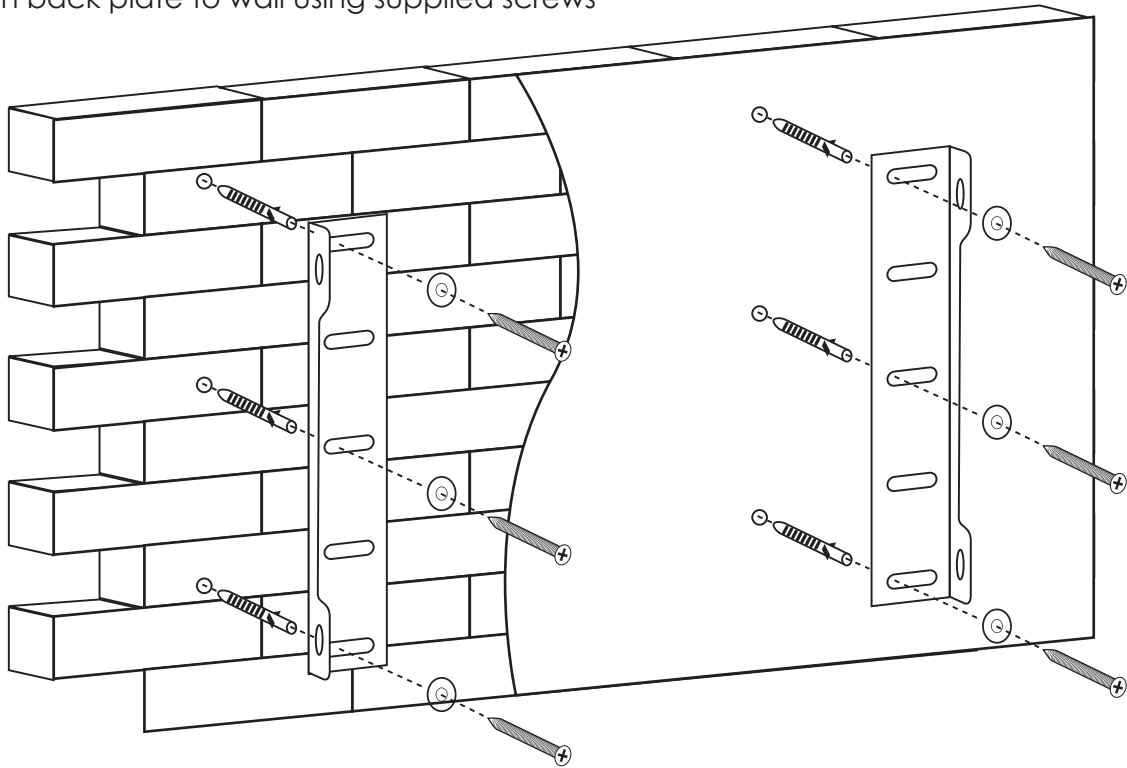


Step 2 – Mounting Hooks to TV

Remove 4 x screws from back of the TV, line hooks up with the holes and attach hooks to back of TV using these screws

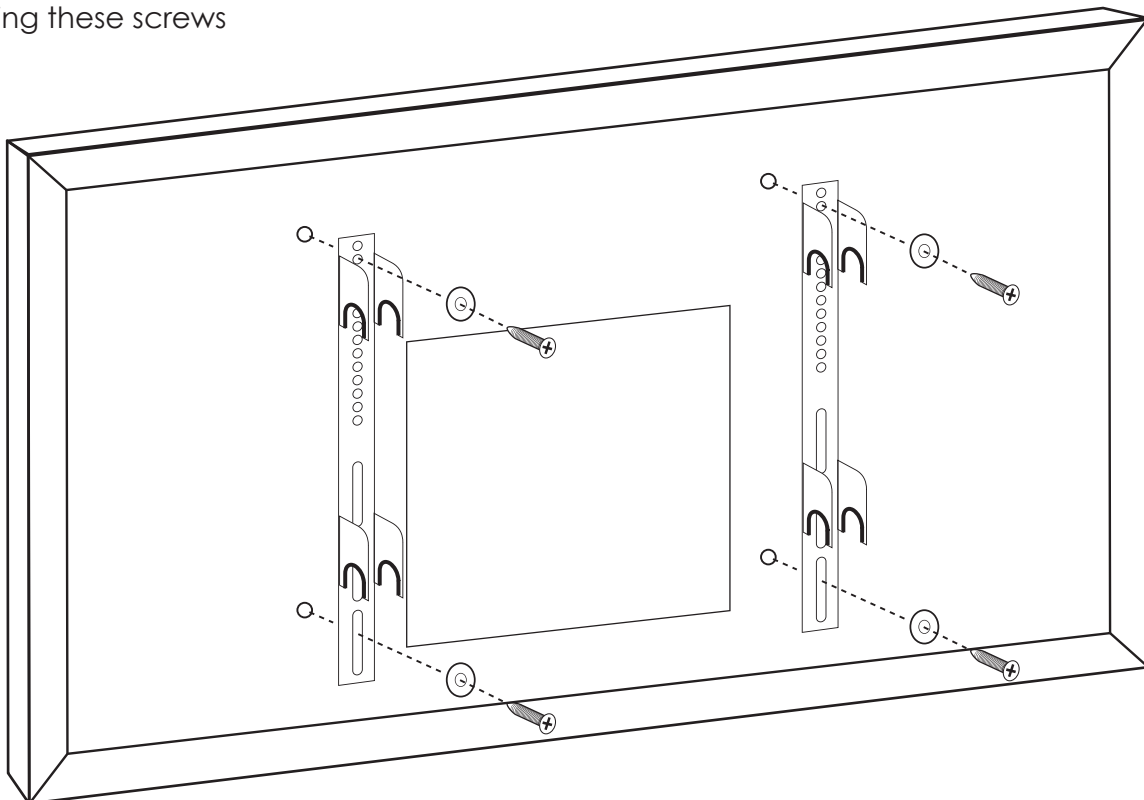


Step 3 – Connecting the wires

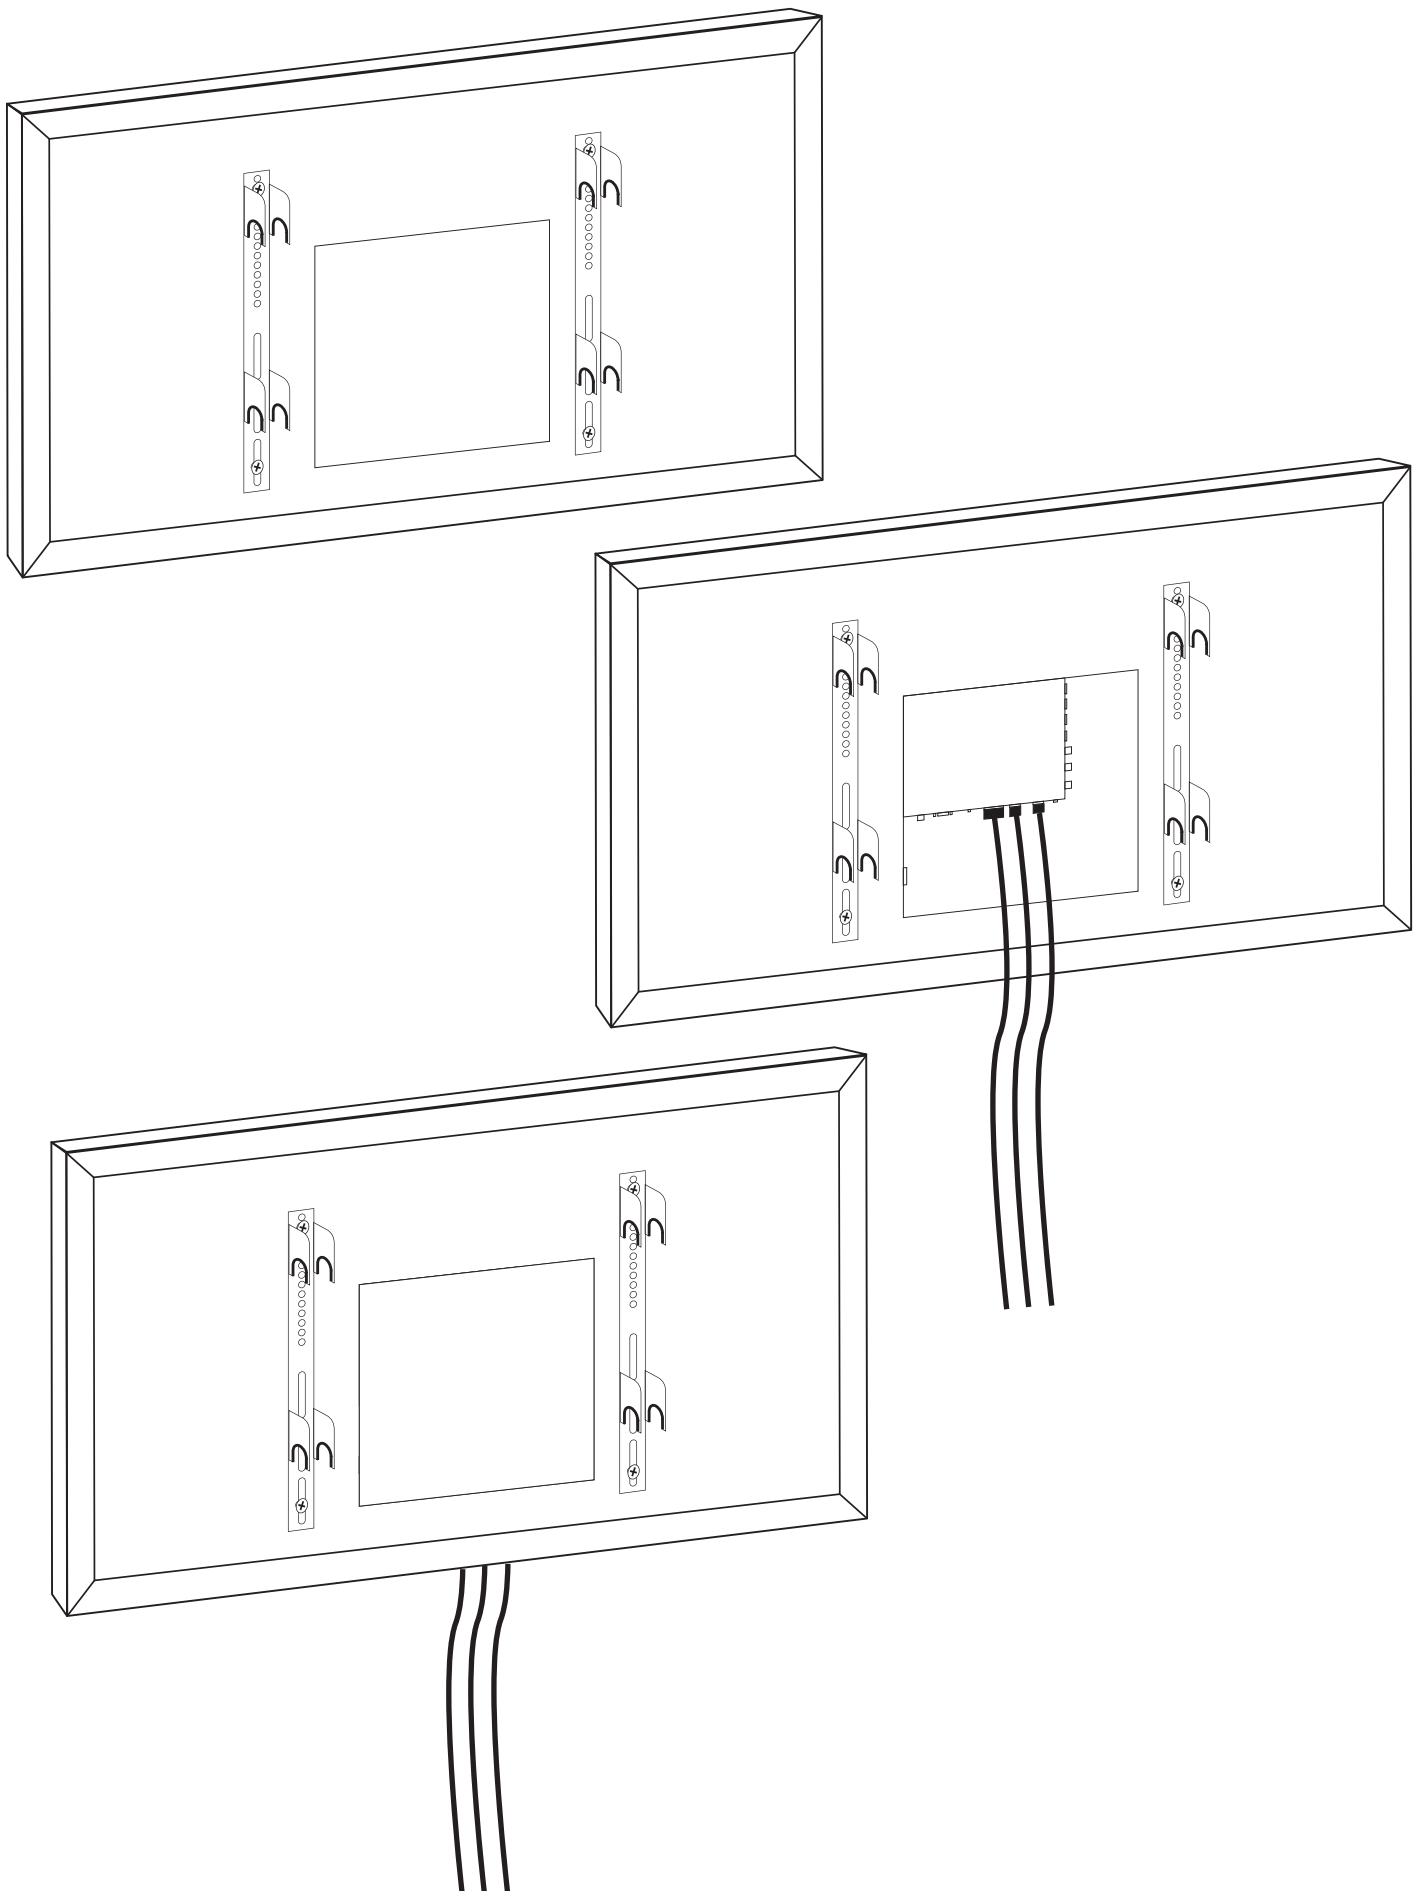


Step 4 – Mounting TV to Bracket

Mount TV to wall bracket by lining up hooks with the poles and then lock in to place

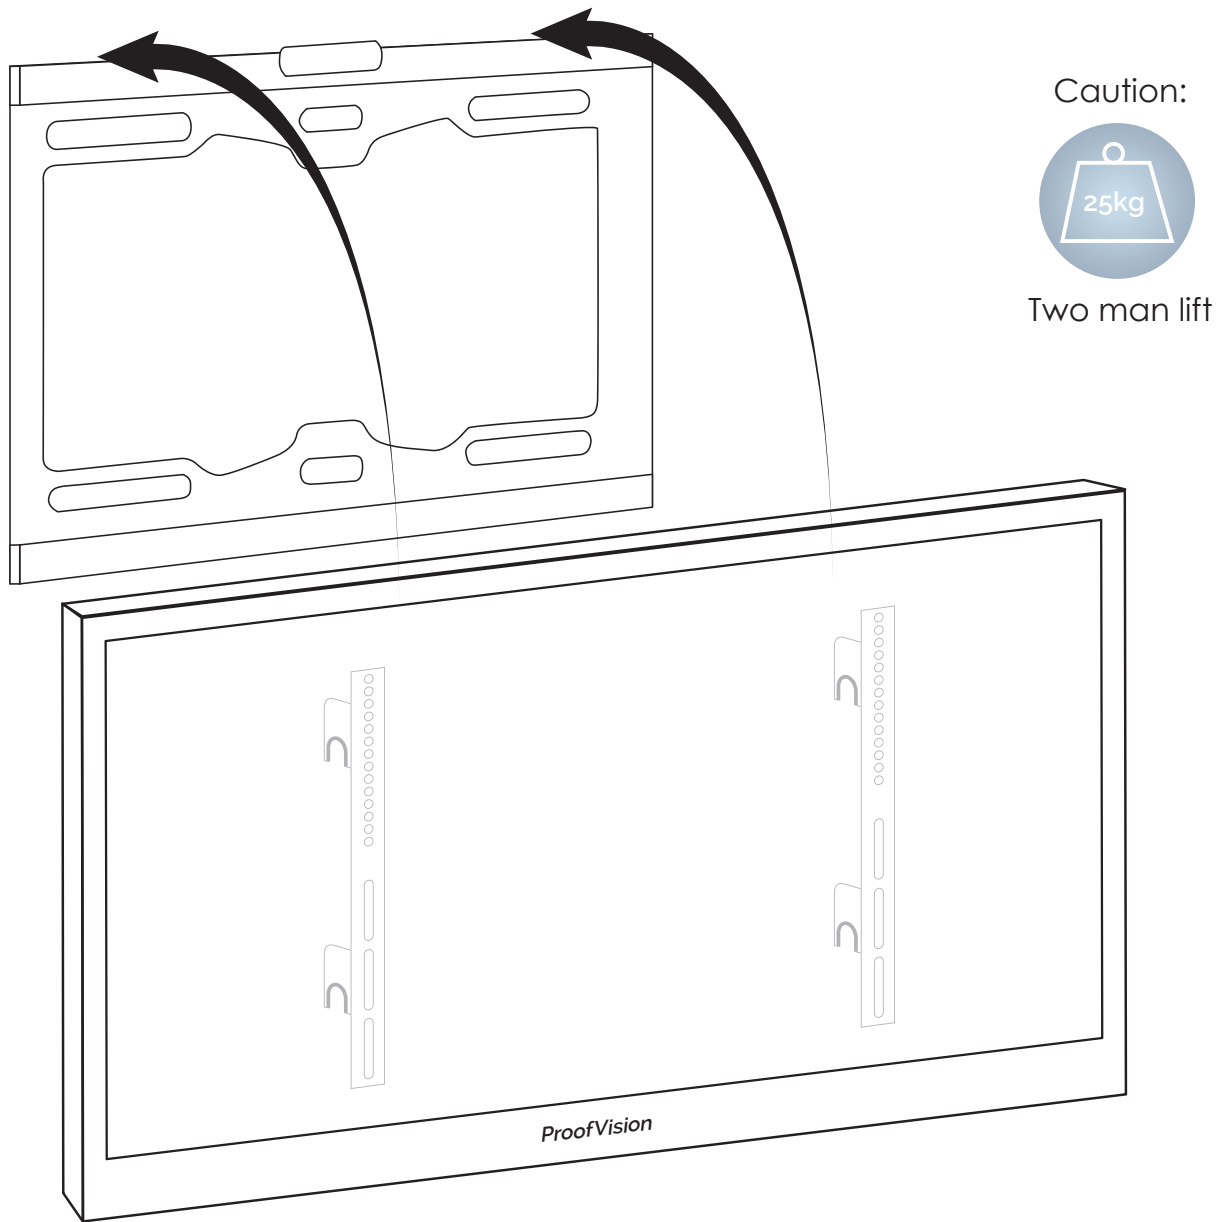

VESA standard	43" 200x200mm
---------------	------------------

Remote control

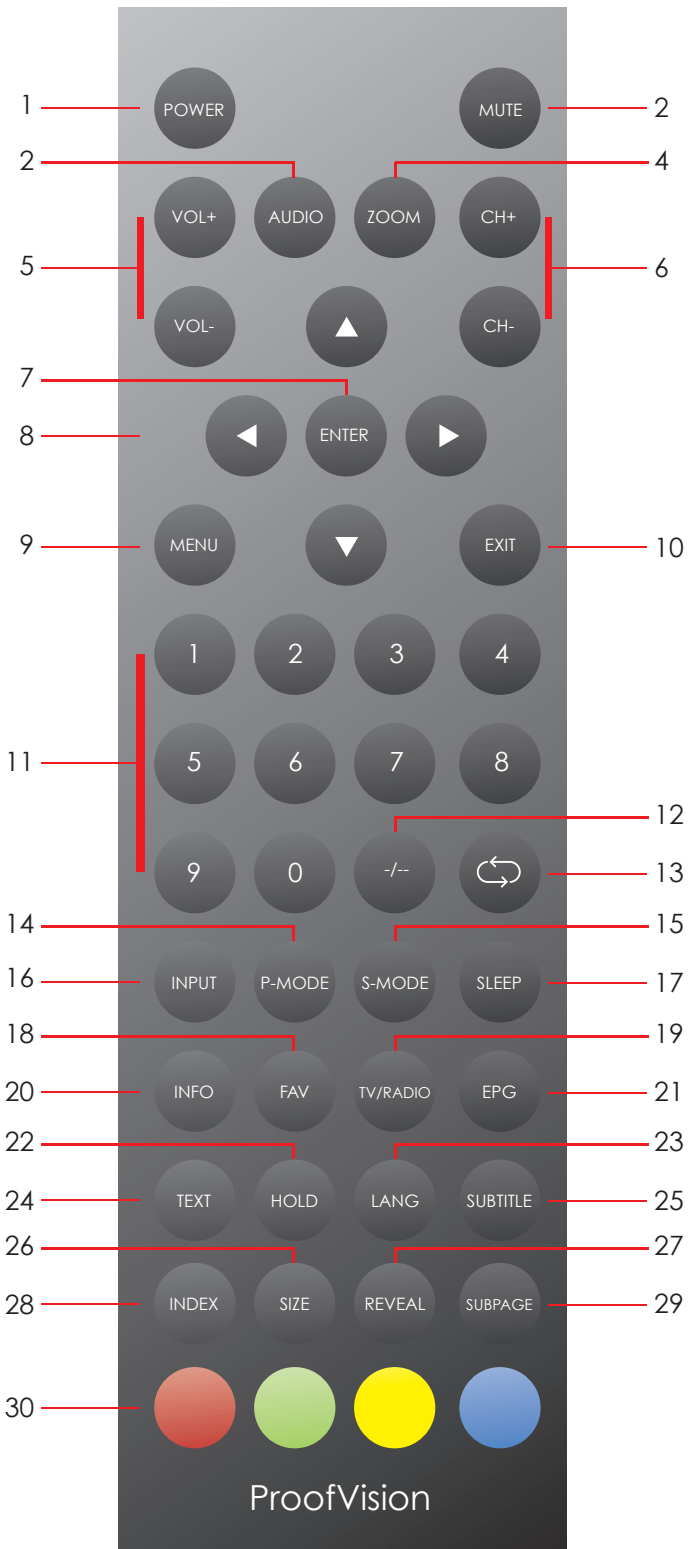


1. POWER button-Press this button to switch on the TV when in standby mode or to turn off and put on standby
2. MUTE button-Press this button to mute or restore sound
3. AUDIO button-Press this button to get Mono channel/doubly channel/Stereo
4. ZOOM button-Press this button to switch between 4:3 and 16:9 picture format
5. VOL+, VOL- button- Increase or decrease the Volume
6. CH+, CH- button-To change the TV channel
7. ENTER button-Confirm the menu option
8. UP/DOWN/LEFT/RIGHT button-Press these buttons to get last/next/left/right menu options
9. MENU button-Press this button to enter into TV main menu
10. EXIT button-Press this button to go back to menu
11. 0-9 button-Press these buttons to get given TV channels
12. -/-- button-One/two/three-digit channel selection
13. Return to previous TV channel
14. P-MODE button-Switch the picture mode(USER/STANDARD/BRIGHT/SOFT)
15. S-MODE button-Press this button to switch to a different sound mode
16. INPUT button-Press this button to switch the input source. Change the SOURCE from VGA/HDMI/TV/AV
17. SLEEP button-Adjust the sleep timer
18. FAV button-Press this button to open or close favourite program group
19. TV RADIO button-Press this button to switch to TV or radio
20. INFO button-Display the information on the top-right corner of screen(e.g. channel number, TV system, resolution and frequency for PC etc)
21. EPG button-Press this button to display preview programs
22. HOLD button-Press this button to enter into hold mode
23. LANG button-Press this button to choose different languages
24. TEXT button-Press this button to enter TELETEXT mode
25. SUBTITLE button-Press this button to display the subtitle
26. SIZE button-Press this button to zoom up half of the TELETEXT page
27. REVEAL button-This command will only be valid if the TELETEXT page is being displayed. This command displays any concealed characters in the TELETEXT display
28. INDEX button-Press this button to enter the index page of the TELETEXT content
29. SUBPAGE button-Press this button to display a sub-page of the selected page
30. Red/Green/Yellow/Blue colour button-Press these buttons to execute various colour coded texts/functions in TELETEXT

Menu screens

Under TV mode, press 'Menu' button to show Channel, Picture, Sound, Time, Option, Lock menu. Press Enter button to select specific submenu.

Channel Menu

On DTV/ATV, this menu will appear so you can tune the TV to pick up channels. Use 'Auto-Search' and follow the steps from there to automatically pick up channels.

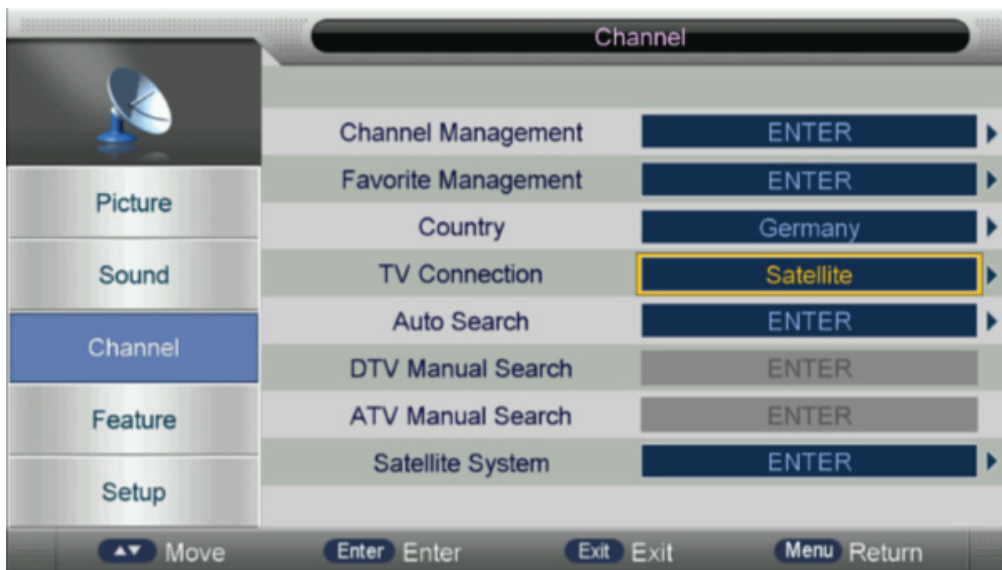

Channels in wrong order

When the TV is tuned in while plugged in to an aerial, the channels may appear in the wrong order. There is no manual solution to deleting individual channels. To solve this, you will have to wipe the channels and retune. To do this, use the Reset TV Setting in the Setup area of the menu. Once done, re-tune the TV.

Picture Menu

This menu is for amending the picture quality. Change Picture Mode to 'User' to have full access to the settings.



Menu screens


Sound Menu

If external speakers are connected, use this menu to amend the sound settings from the TV.



Feature Menu


This menu is for personalising the settings of your TV to operate how you would like, with useful settings such as language and sleep timers.

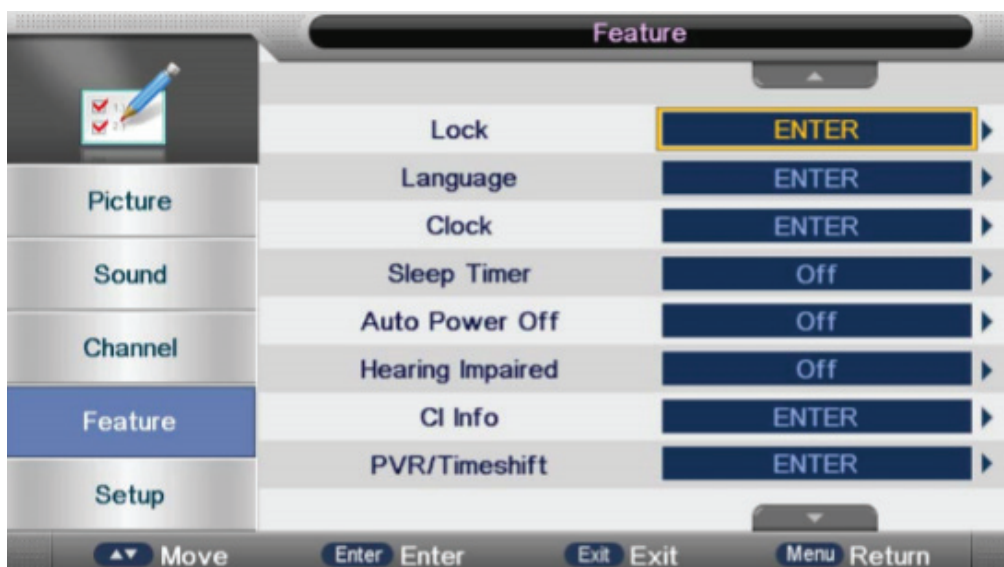

Menu screens


Setup Menu

Use this area of the menus to access several different modes and settings to operate your TV.

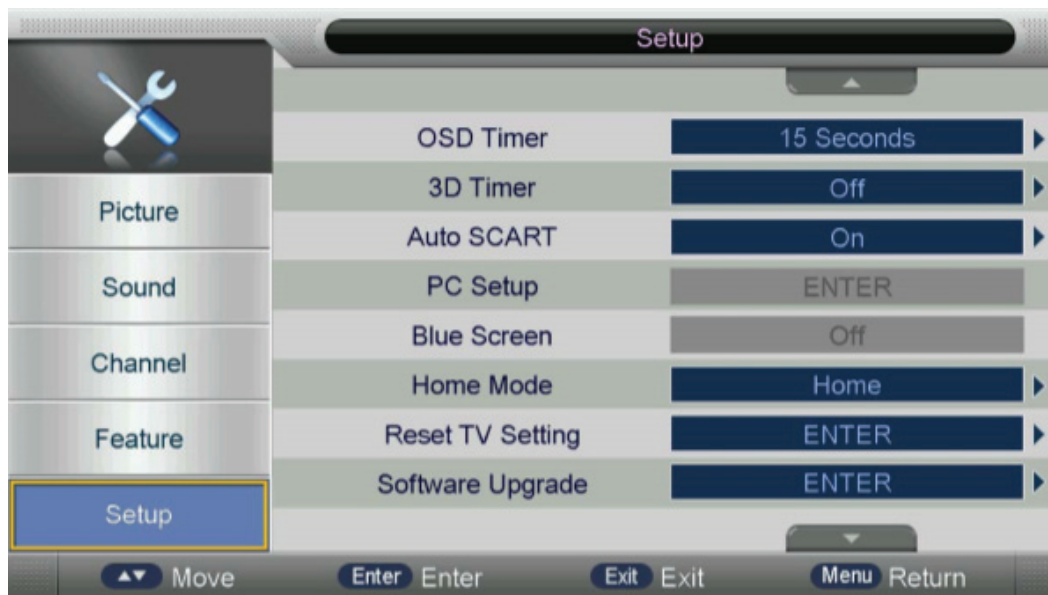

Input Menu

Press 'Input' button on the remote control to show the source list, then you can press Up/Down/Left/Right buttons to select the source and press 'Enter' to confirm the option.

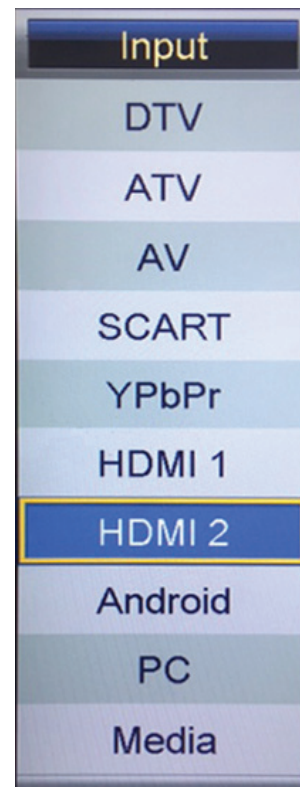

Warranty and troubleshooting

Warranty

Your ProofVision outdoor TV comes with 2 years standard warranty. This is a manufacturer's warranty and does not cover labour. Please report damage in transit within 48 hours of receiving the TV otherwise we may not be able to accept a warranty claim.

If the TV does develop a fault during use, please report directly to ProofVision by phoning 020 8965 5666 or emailing sales@proofvision.co.uk

Troubleshooting

Some issues may be solved by trouble shooting, so before contacting us, please carry out the below procedures

- No Standby light.....Check power cable is connected properly.
- Stuck on Standby light.....Disconnect power for 24 hours and reconnect
- No Aerial Signal/InterferenceTry moving the aerial to a better position and retune, check cable is plugged in correctly
- Unresponsive remoteTry replacing batteries
- Channels in wrong order.....When the TV is tuned in while plugged in to an aerial, the channels may appear in the wrong order. There is no manual solution to deleting individual channels. To solve this, you will have to wipe the channels and retune. To do this, use the Reset TV Setting in the Setup area of the menu. Once done, re-tune the TV.